




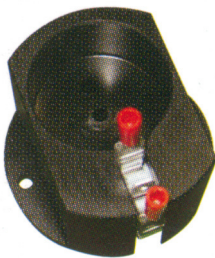
HIGH-FREQUENCY MULTIVOLTAGE BATTERY CHARGER.....

MULTIVOLTAGE BATTERY CHARGER

- This charger can charge batteries in the range up to 96 V with an adjustable current between 1 to 50 A.
- Time is adjustable from 1 to 72 hours.
- Charger weight only 9 kg and is easy to move.
- This unit can be used for on-site assistance, providing improved charging of any battery or replacement of any old charger that may have failed.



REF 124TA1705

THERMAL SENSOR	SUPPORT
 <p>REF 116TA6110 Thermal sensor for automatic compensation. Adjusts the battery voltage in relation to the ambient or battery temperature. (except BC1 and UBC)</p> <p>Length: 5 m</p>	 <p>REF 116TA6111 (except BC1 and UBC)</p>
INDICATOR	SUPPORT
 <p>Shows the charging phase for on-board chargers</p> <p>REF 116TA6112 – Remote indicator, LED D10, 2,5 m. For UBC/BC 1 (Installation hole Ø 14 mm)</p> <p>REF 116TA6113 – Remote indicator, 2, 5 m. For UBC/BC 1 (Installation hole Ø 22 mm)</p> <p>REF 116TA6114 – Remote indicator, LED D10, 1 m. For NG (Installation hole Ø 14 mm)</p> <p>REF 116TA6115 – Remote indicator, 1 m. For NG (Installation hole Ø 22 mm)</p> <p>REF 116TA6116 – Remote indicator, LED D10, 1,3 m. For NG (Installation hole Ø 14 mm)</p>	 <p>REF 116TA6118 Automatically stops the truck when main voltage is present. For BC1, NG1 and NG3</p>

[Click here to see the complete Energic Plus catalogue](#)